Fabric AC Exhaust Instruction Manual

For questions, concerns or feedback please send an email to info@aleflyt.com and we will do our best to get back to you as soon as possible.

Warnings/Disclaimers:

1. The included embroidery sewing snips are very sharp. Never place your fingers between the blades.



Parts List:

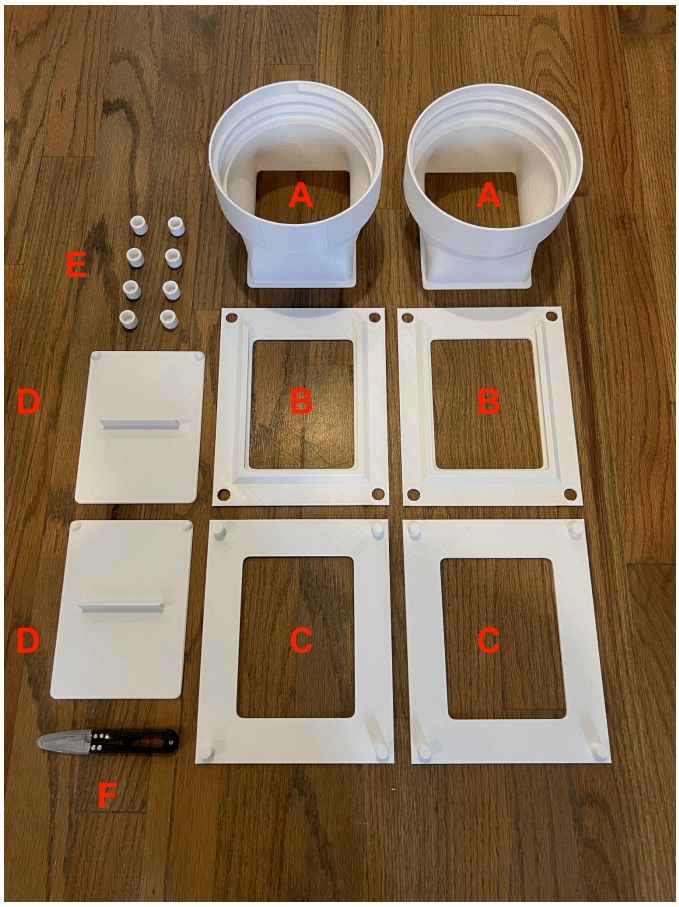

A. AC Exhaust Hose Adapter x2
B. Interior Exhaust Port x2
C. Exterior Exhaust Port x2
D. Interior Exhaust Port Cover x2
E. Interior Exhaust Port Screw Cap x8
F. Embroidery Sewing Snips x1

Assembly Instructions:

1. Clear out a space of at least 4 by 7 feet (or whatever size is needed for your fabric):



2. Lay your fabric flat on the ground:



3. Place the Interior Exhaust Ports (B) at the **bottom** corners of the fabric **at most** 2 inches from the **bottom** and **at least** 3 inches from the **sides**



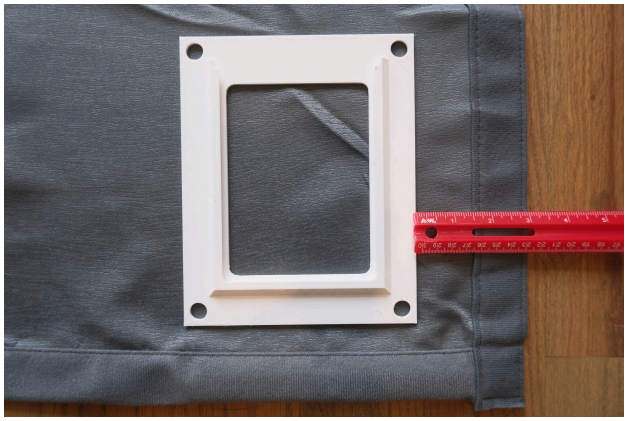

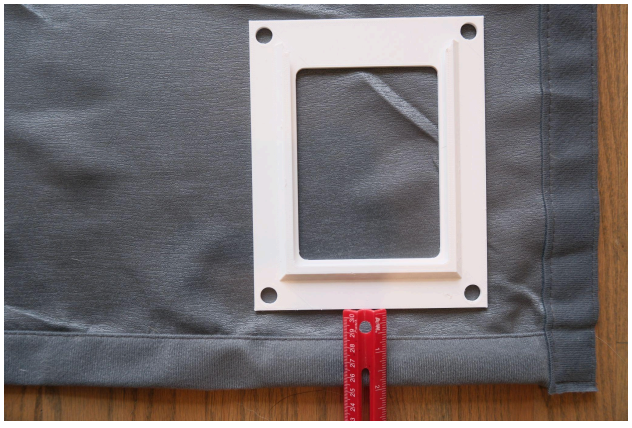

4. Flatten the underlying fabric as much as possible. If there are bumps or wrinkles, it can cause the holes to end up in the wrong places.
5. Use a pen to trace within the 4 circular corners and the middle rectangle.

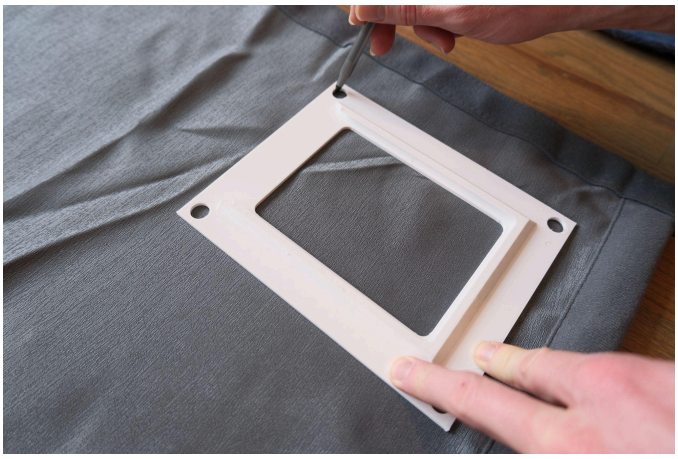

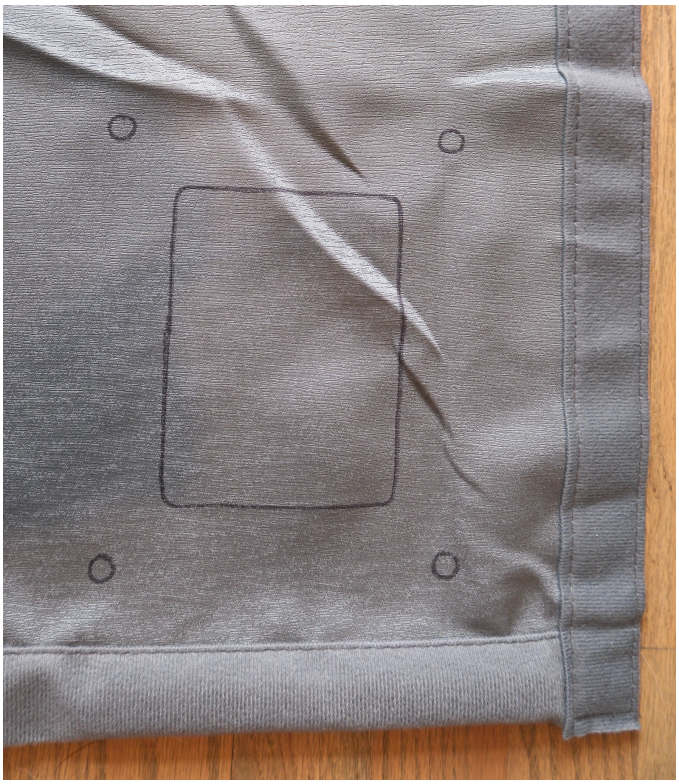

6. From this point on, **do not cut outside any of these drawings**. These are your boundaries.

7. Draw crosses in the 4 circles like so:



8. Fold the fabric along one edge of the cross and cut along the other edge using the Embroidery Sewing Snips (F) like so, ensuring that you do not cut outside of the circle:

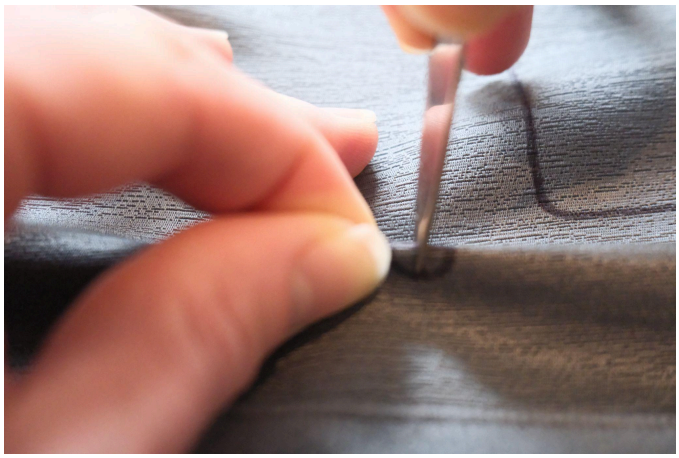

9. From the cut you just made, cut along the other edge like so, again ensuring that you do not cut outside of the circle boundary:



10. At this point, you should have cut along all 4 edges of the cross.
11. Repeat this process for the remaining 3 circles.
12. You may cut out the fabric circle entirely, however it is not typically necessary.
13. Finally, cut out the rectangle using a similar folding approach until the fabric looks like this:



14. Place the Exterior Exhaust Port (C) underneath the fabric and feed it through the holes you cut:





15. Press down on the fabric to ensure a tight fit.
16. Place the Interior Exhaust Port (B) on top, ensuring that the slide opening is facing away from the bottom of the fabric:





17. Push down to ensure a tight fit.
18. Screw on the Interior Exhaust Port Screw Caps:





19. Repeat this process for the other exhaust port until it looks like this:





20. The Interior Exhaust Port Covers (D) may be inserted at this time if desired.
21. When inserting the covers, the side with the bumps should be facing away from the bottom:





22. Screw on the AC Exhaust Hose Adapters (A) onto the hoses for your AC unit.
23. When using the AC, remove the covers from the exhaust ports and insert the hoses by sliding them in.